
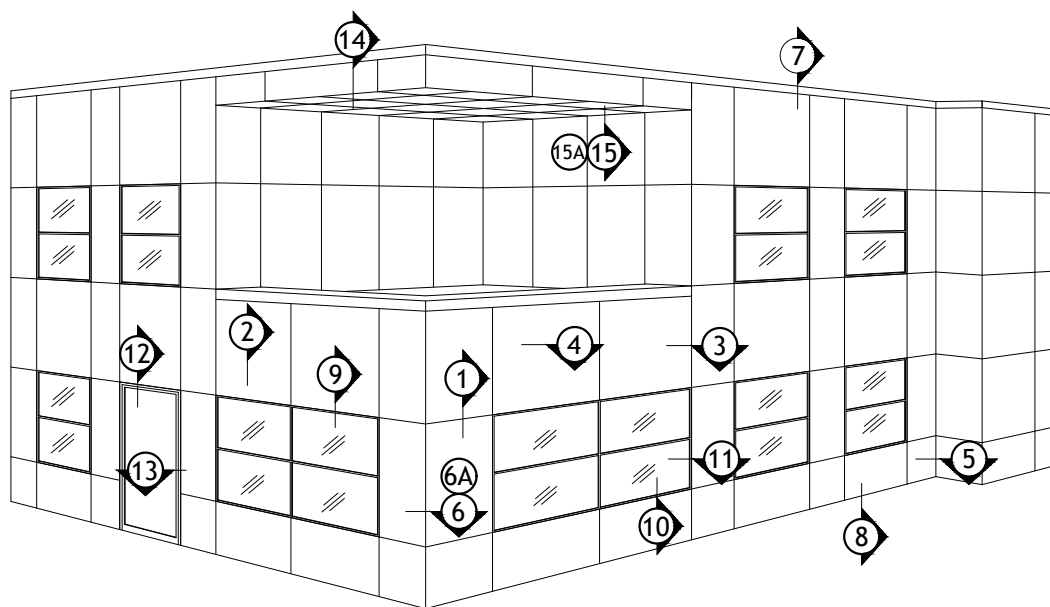


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs Standard Details

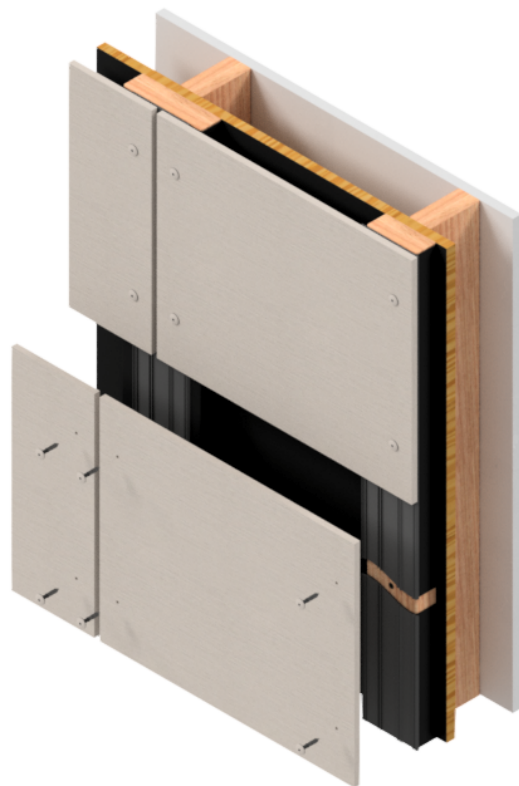

# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs Components

## Supplied by Universe


- Ⓟ1 EQUITONE Panel
- ⓕ1 Panel Fastener (Field Installed)
- Ⓦ1 Winged EPDM (Field Installed)
- Ⓣ1 Vent Closure (Field Installed)

## Supplied by Others


- Ⓧ1 Wood Stud Framing (16" O.C. MAX)
- Ⓧ2 Sheathing
- Ⓧ3 Wood Batten
- Ⓧ4 Wood Batten Fastener
- Ⓧ5 Air/Moisture Barrier
- Ⓧ6 Closure Fastener
- Ⓧ7 Parapet Coping
- Ⓧ8 Window Mullion
- Ⓧ9 Door Framing
- Ⓧ10 Flashing (Sill, Head, or Jamb)
- Ⓧ11 Adjacent Material

Note: The vent closure fasteners, as well as system closures/fasteners, can be supplied by Universe upon request at an additional cost.


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 1 Horizontal Panel Joint

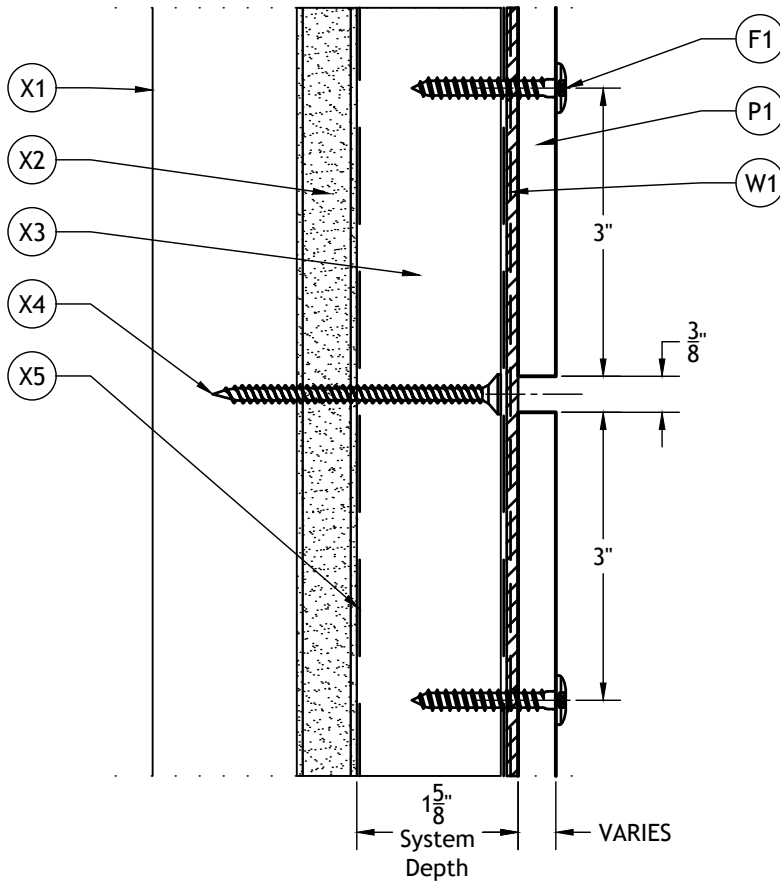


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 2 Horizontal Mid Panel

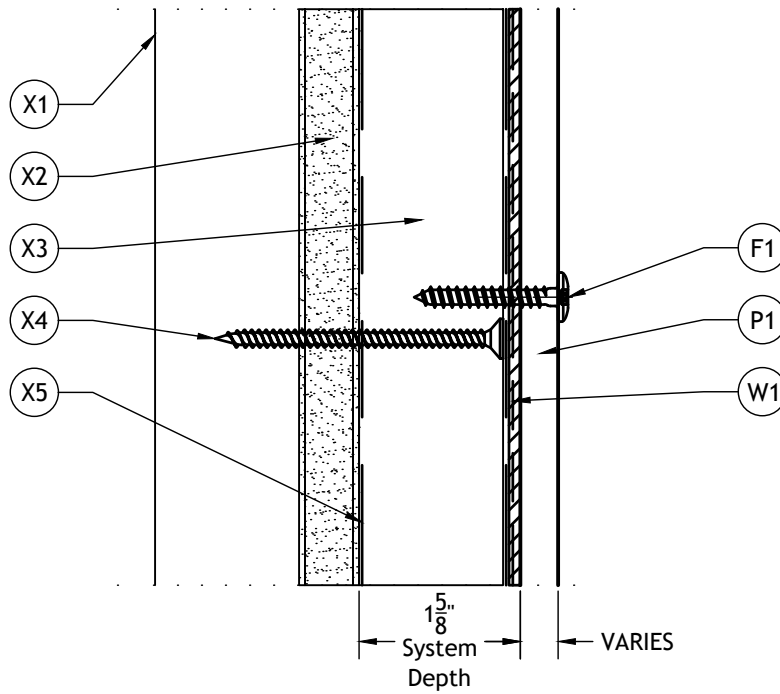


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 3 Vertical Panel Joint

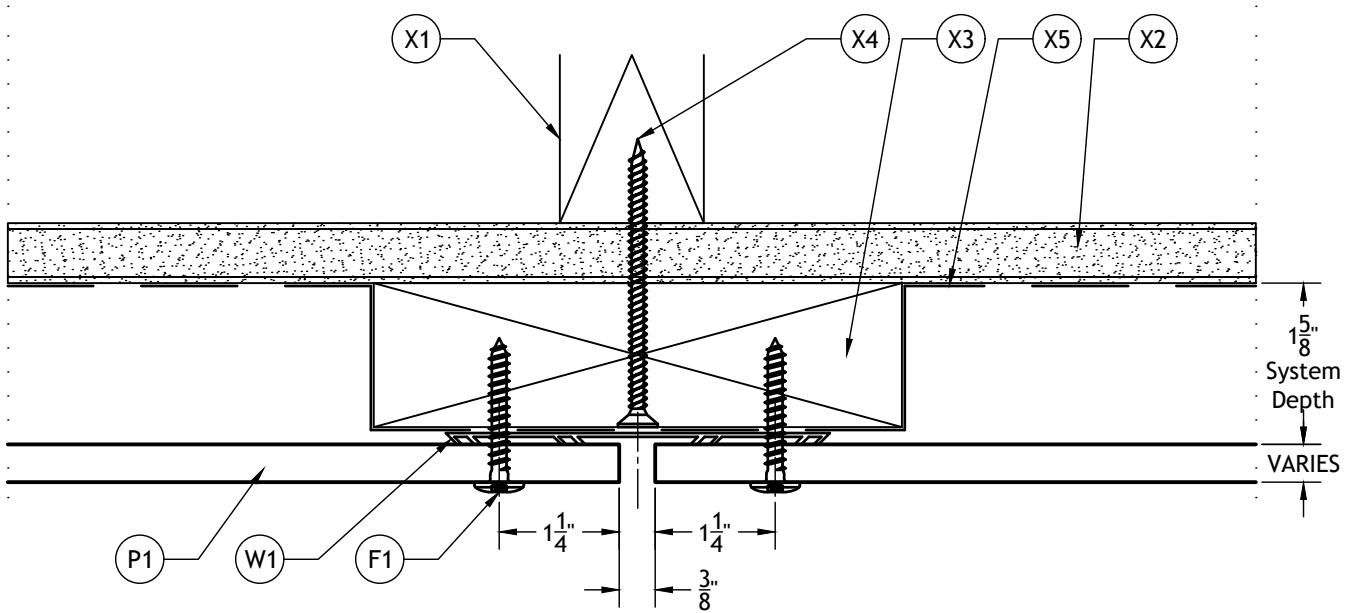


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 4 Vertical Mid Panel

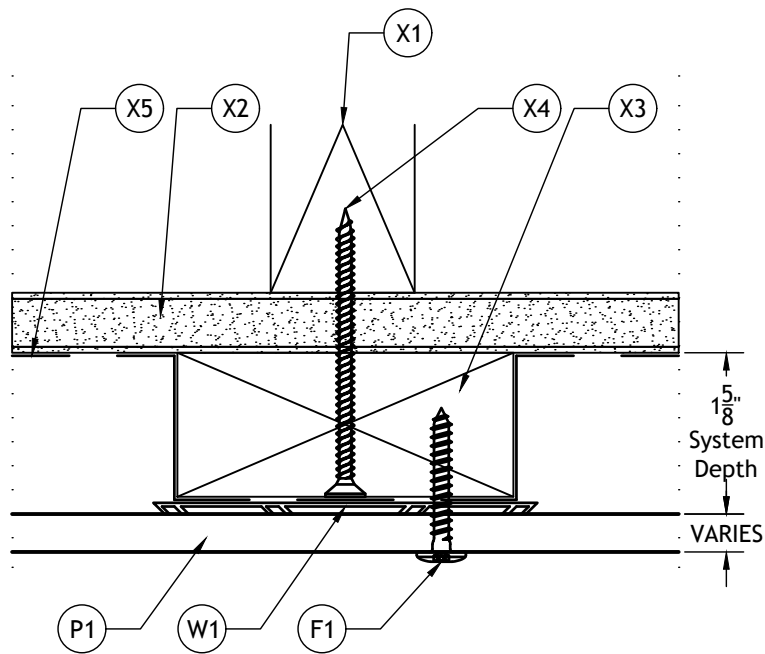

# UNIVERSE® with EQUITONE on Wood Battens on Studs 5 Inside Corner

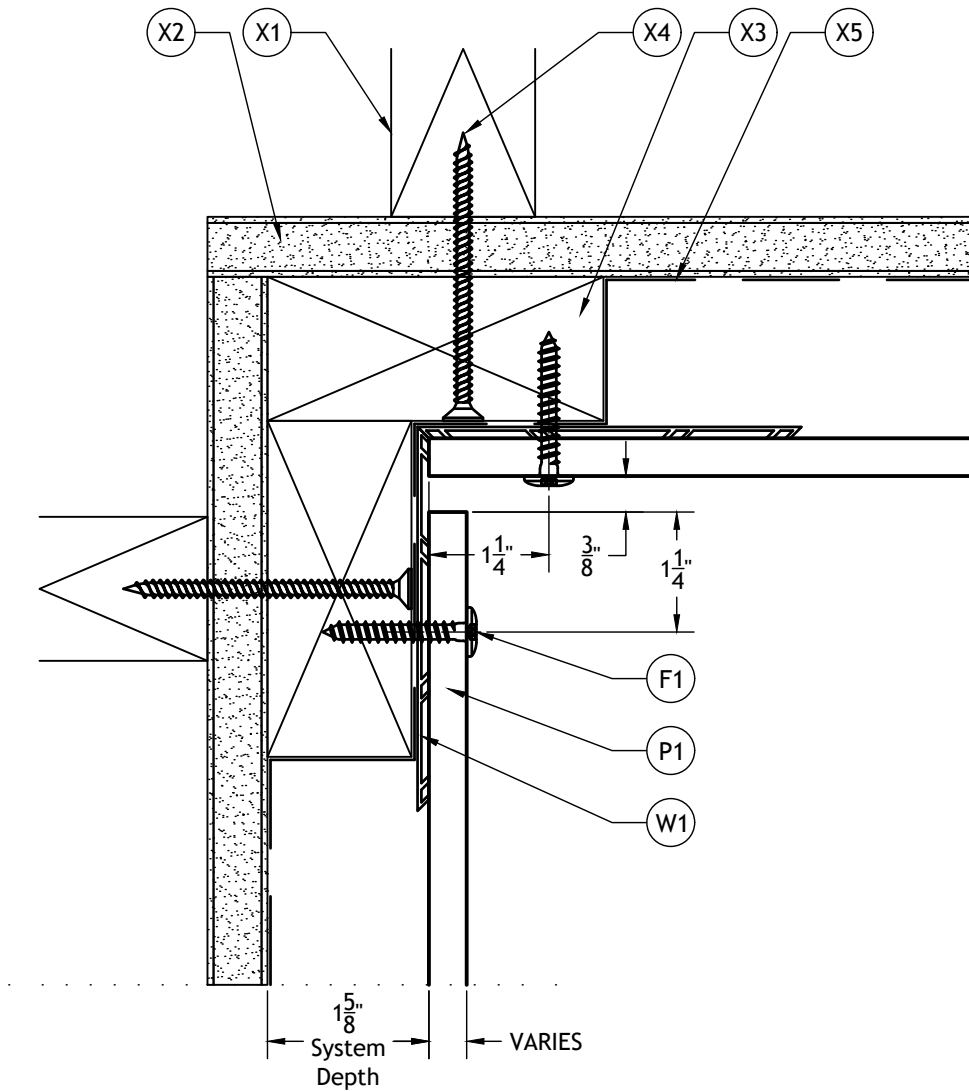


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 6 Outside Corner

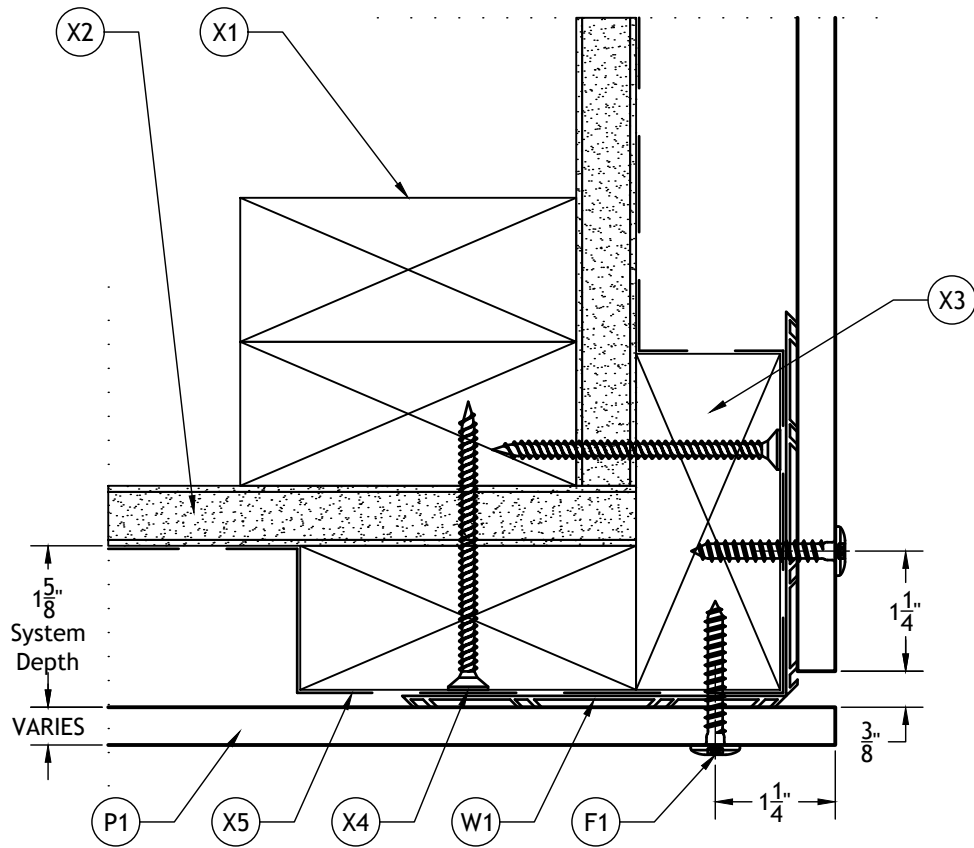




# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 6A Outside Corner - Mitered

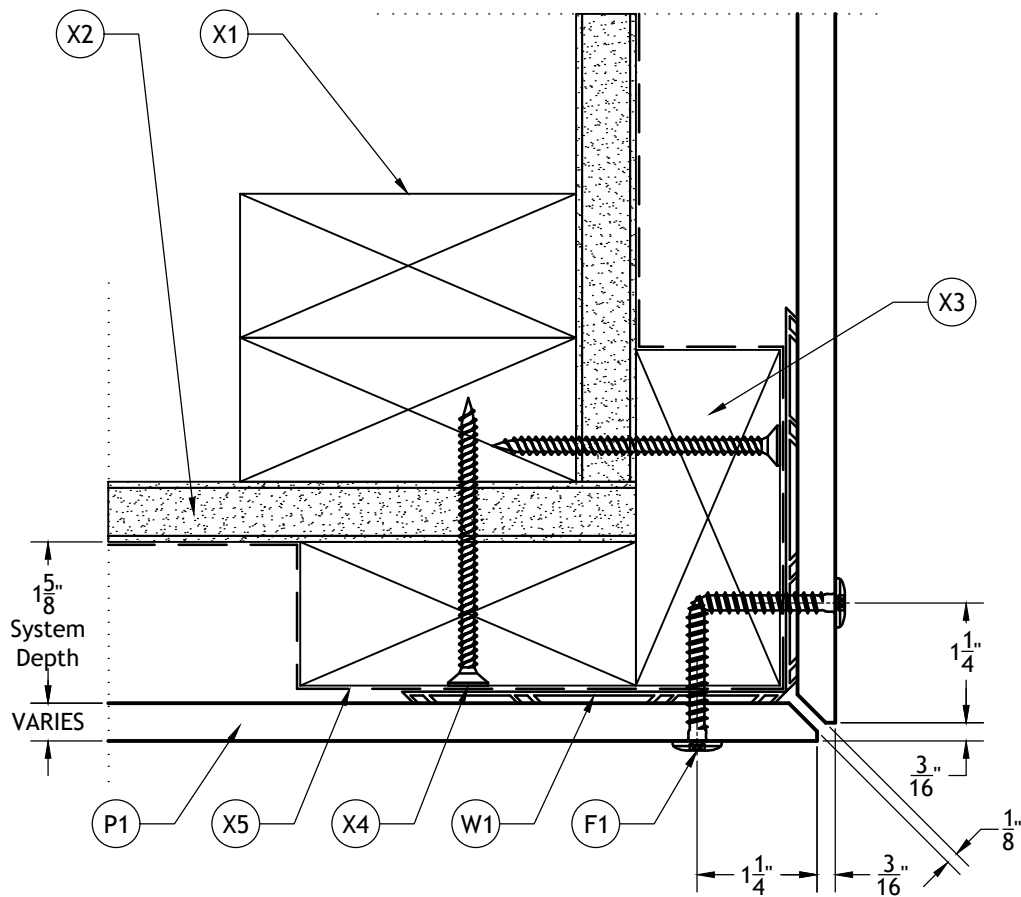


Note: This detail is a premium over Detail 6 due to the extra fabrication effort.


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 7 Top of Wall

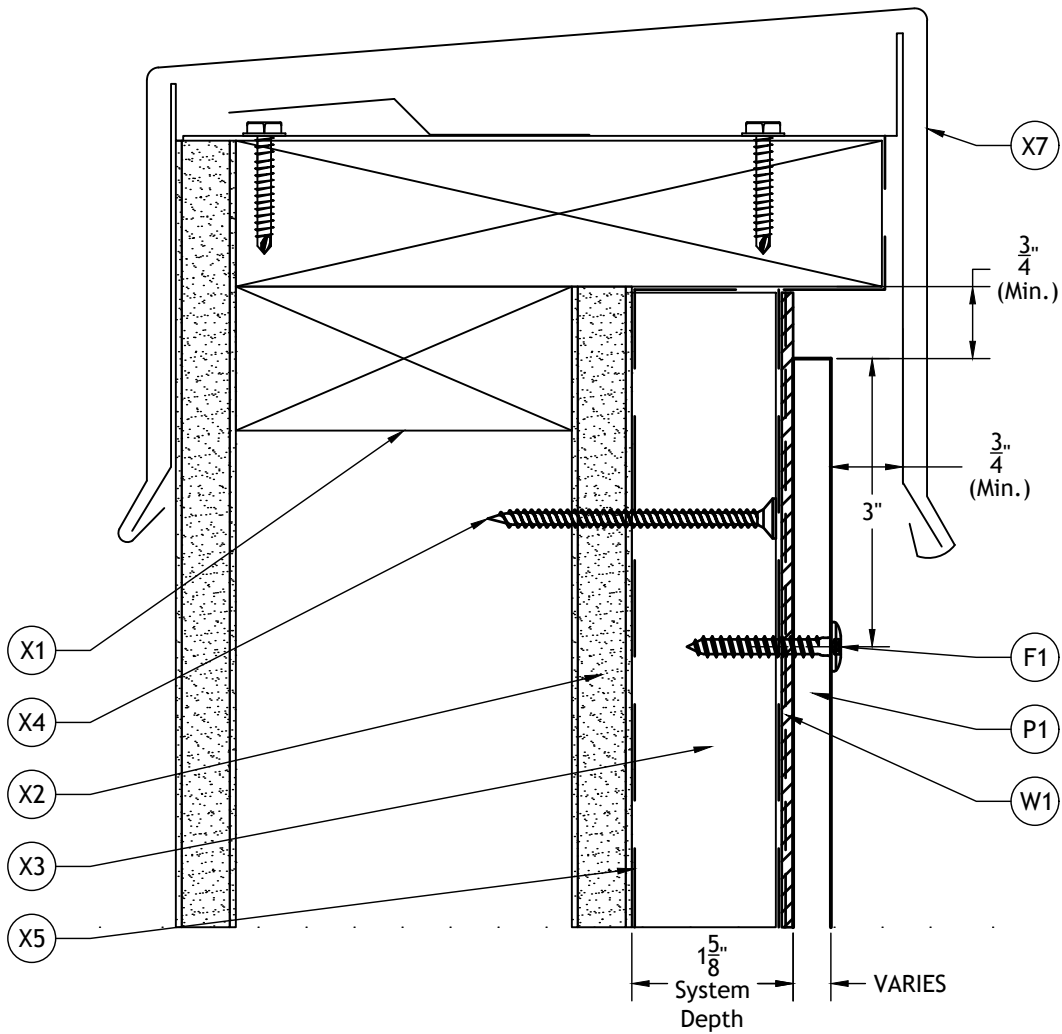


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 8 Bottom of Wall

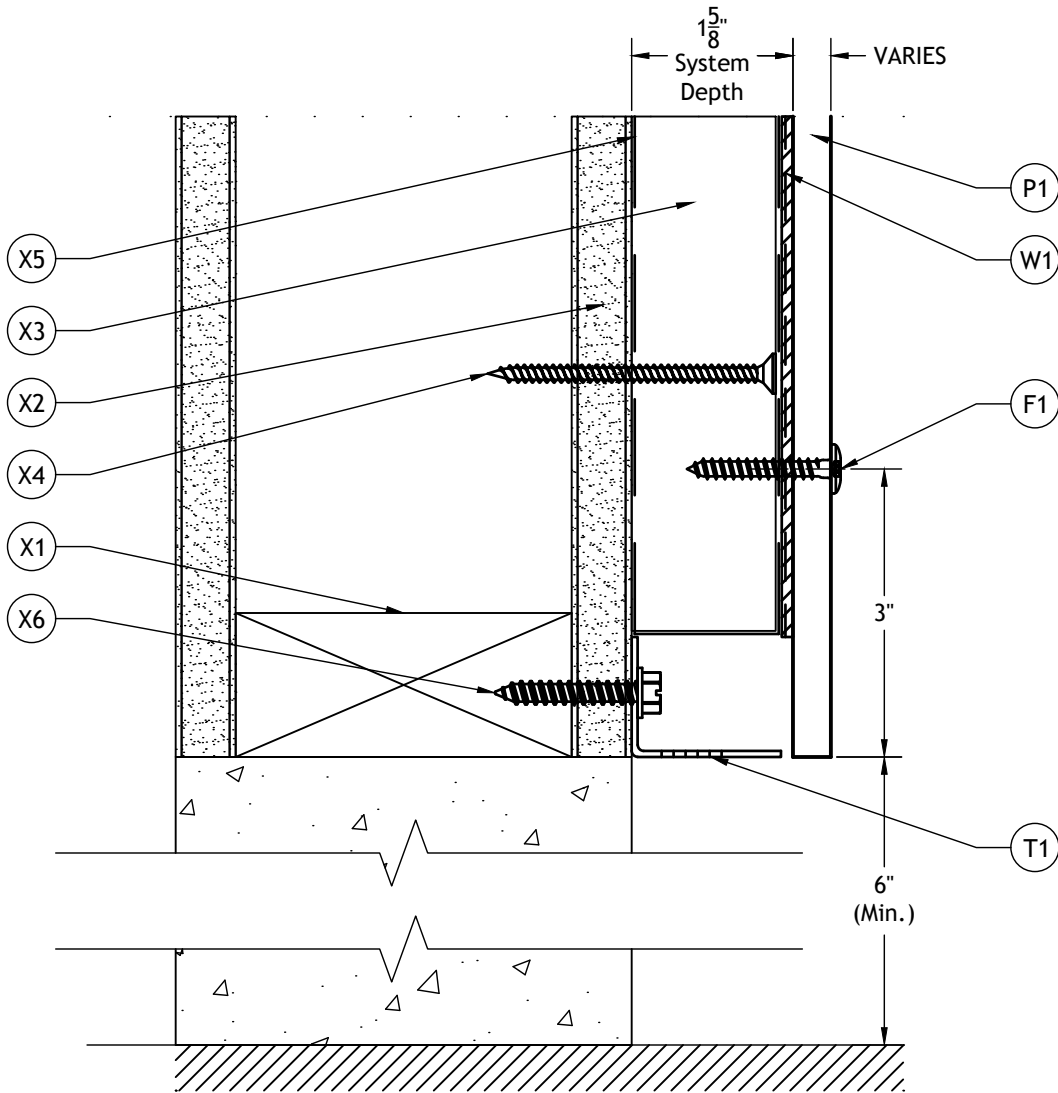


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 9 Window Head

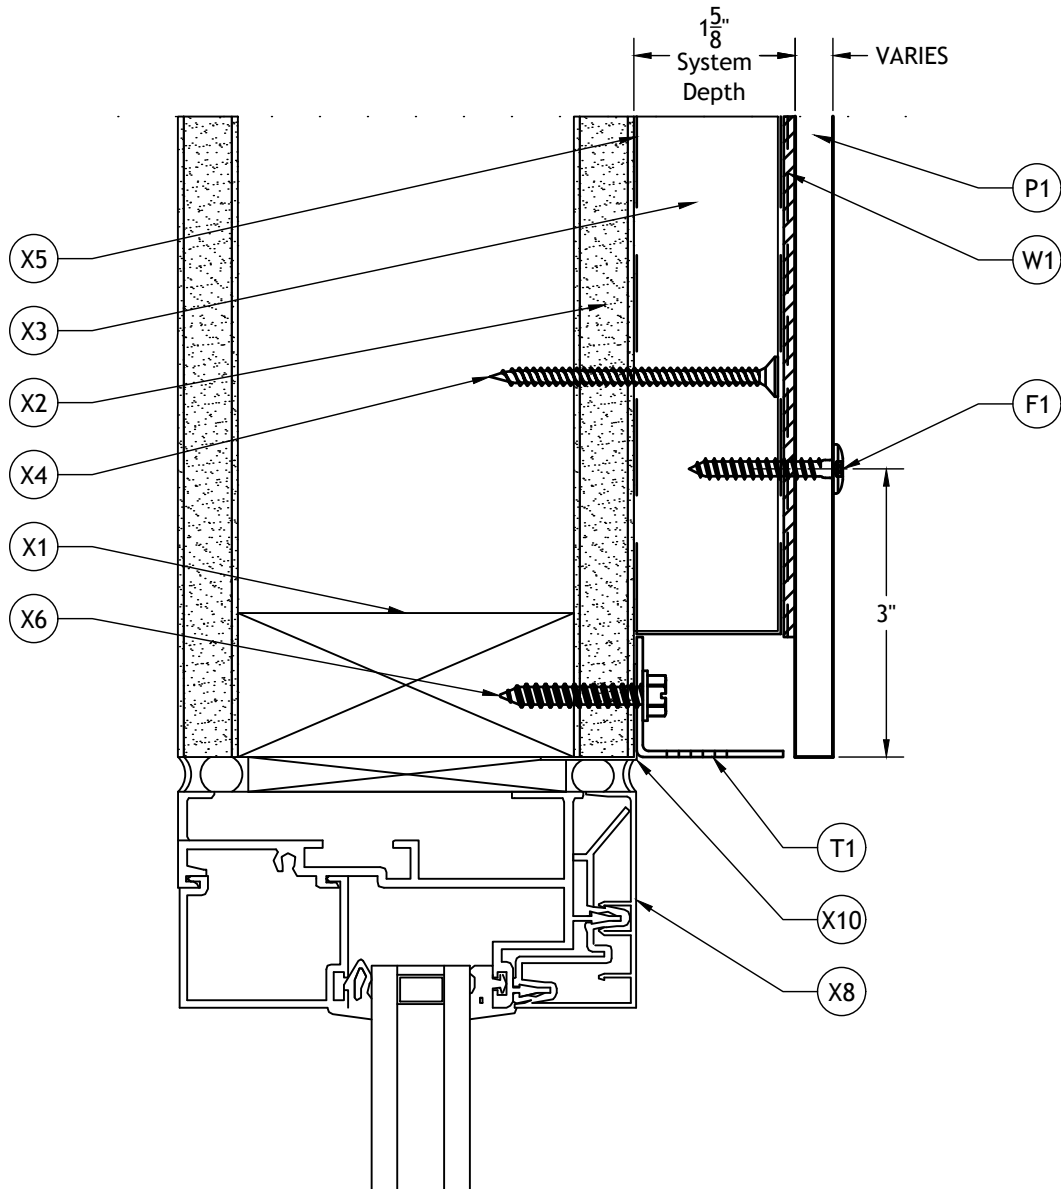


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 10 Window Sill

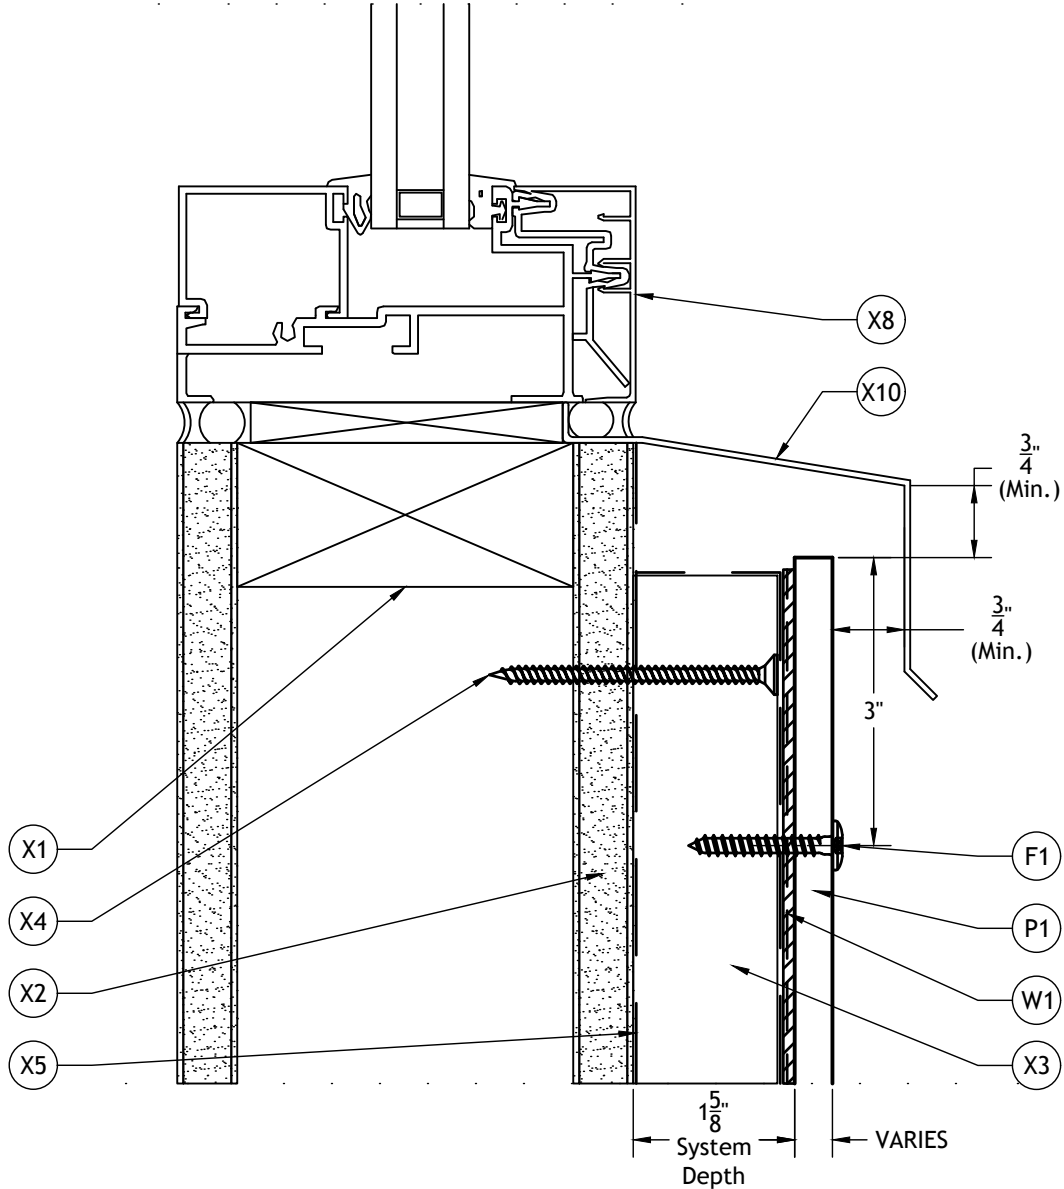


# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 11 Window Jamb

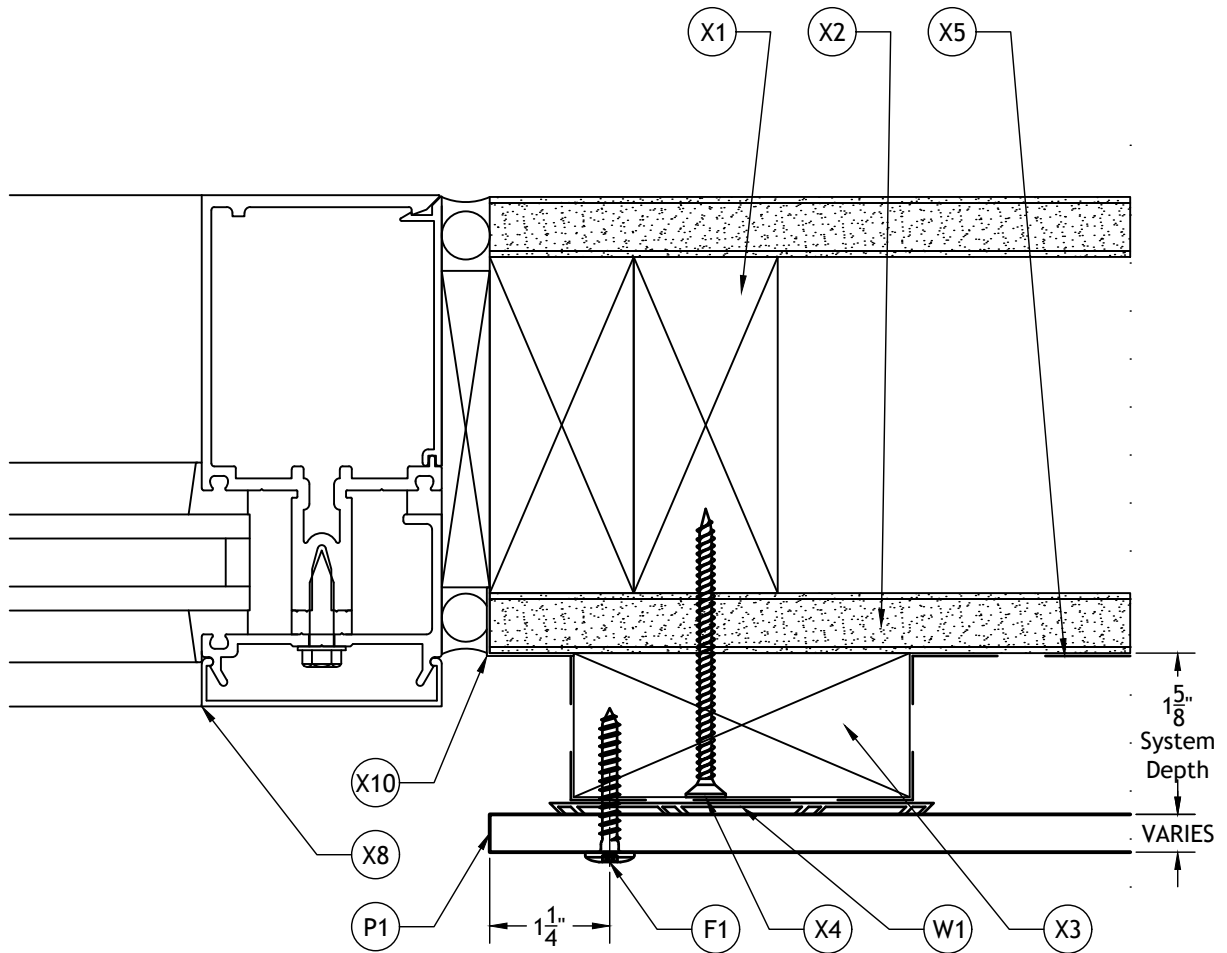

# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 12 Door Head

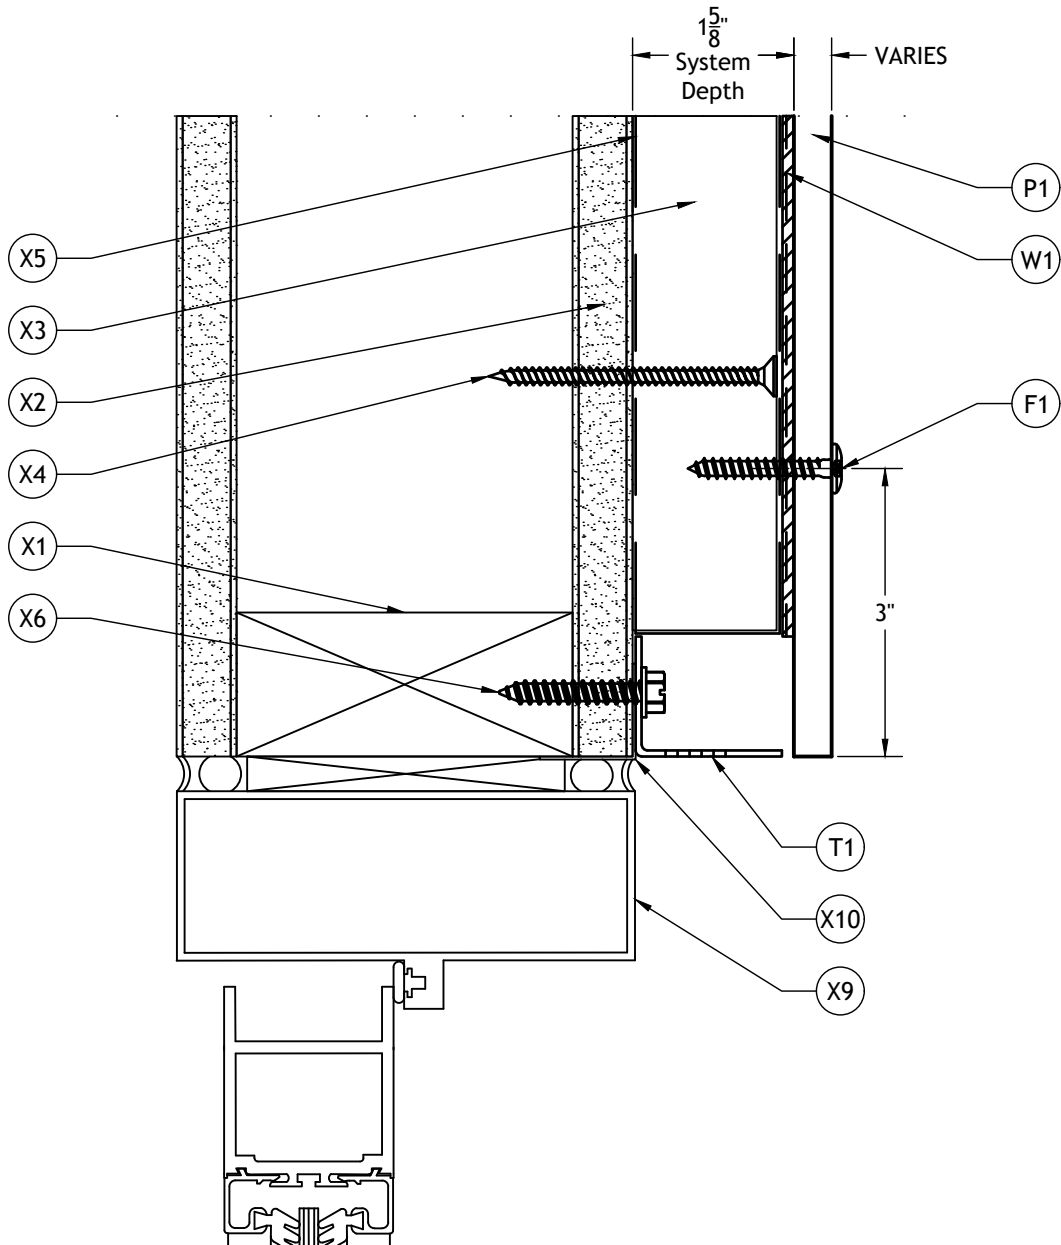


# UNIVERSE® with EQUITONE on Wood Battens on Studs 13 Door Jamb

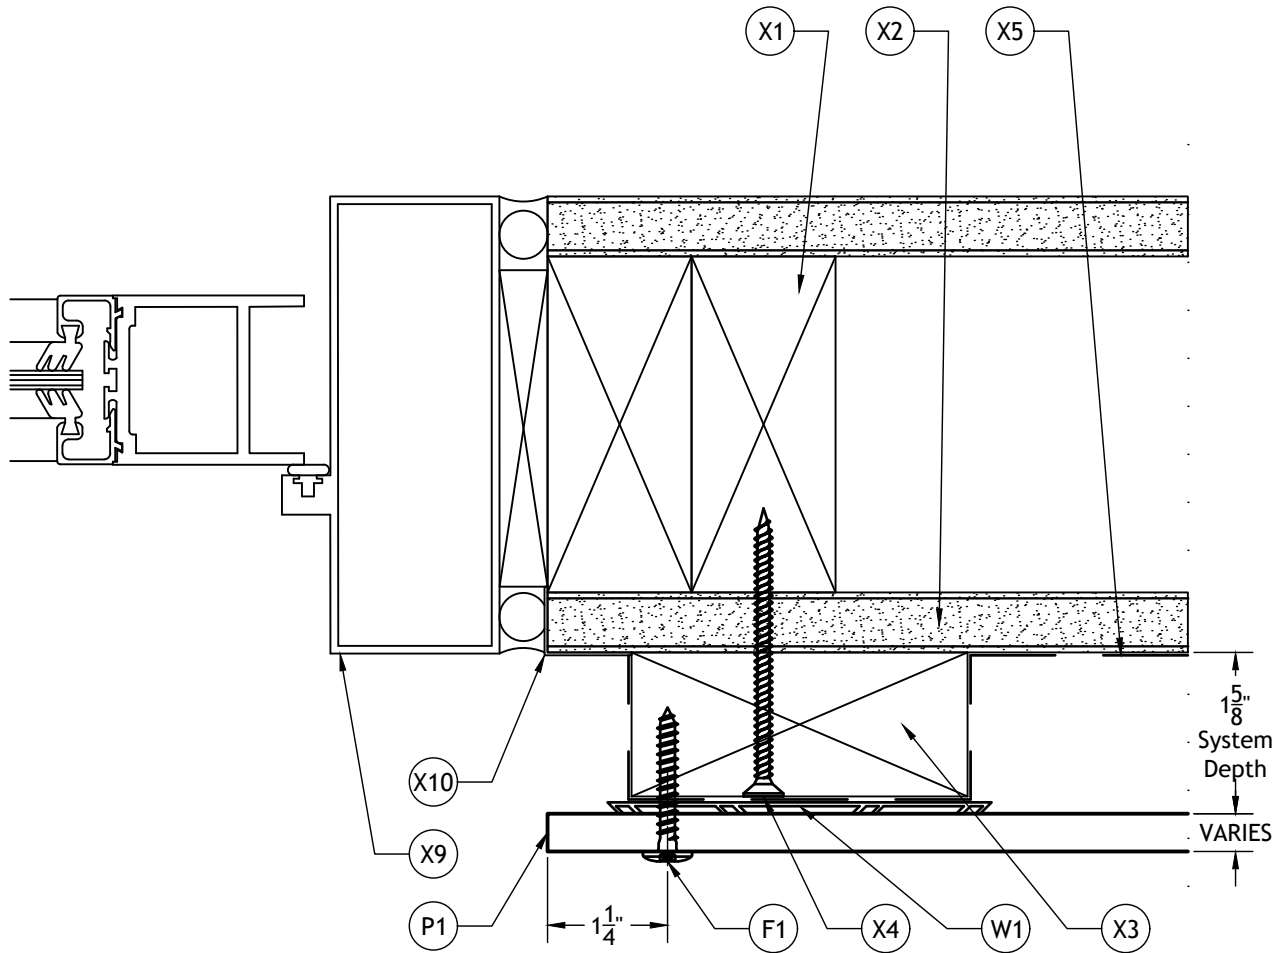




# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 14 Soffit to Fascia Transition

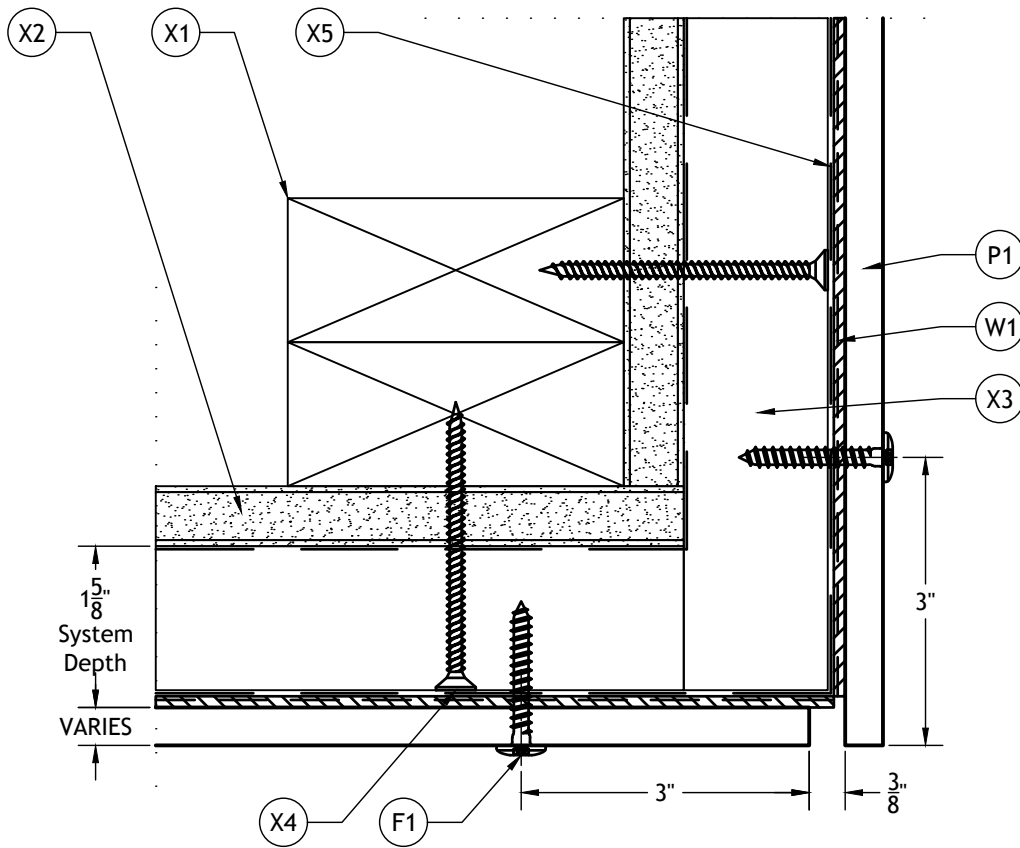

# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 15 Top of Wall - Soffit Transition

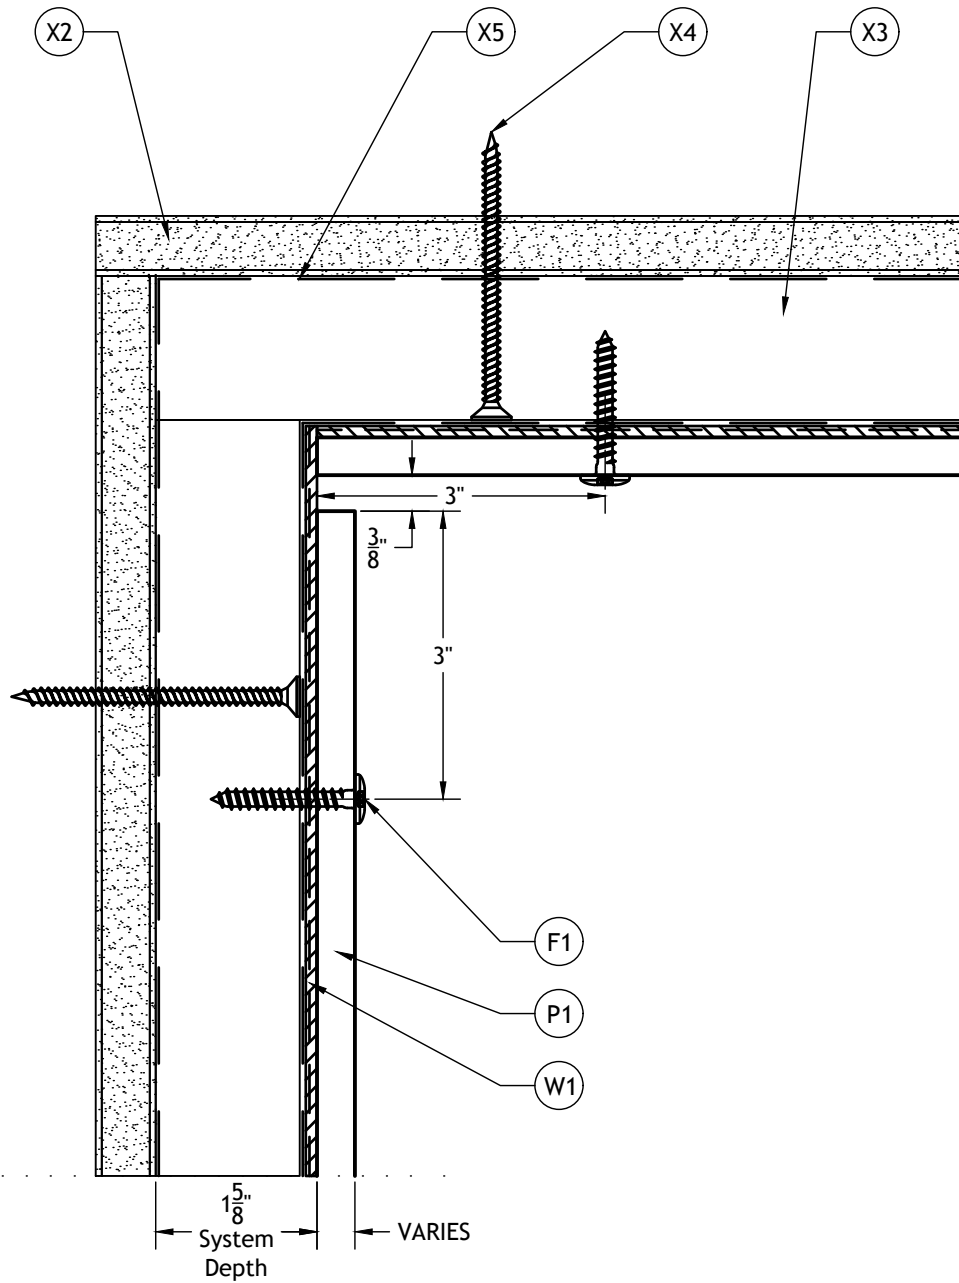

# UNIVERSE<sup>®</sup> with EQUITONE on Wood Battens on Studs 15A Top of Wall - By Others

